



ORIGINAL	REPLACEMENT
	POWER
	MUTE
	MENU
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	AV
EDIT	-/--
DISPLAY	
ZOOM	
TEXT	
SEL. / FAVOR./VOL +	VOL+
LOAD / FAVOR./VOL -	VOL-
CH+	P+
CH-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
	BACK
TIME SHIFT	SLEEP
DTV	TV/DTV
DIMMER	INFO
EPG	EPG
RED	RED

ORIGINAL	REPLACEMENT
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
HDD	SHIFT+1
LAN	SHIFT+2
TV HMR	SHIFT+3
USB	SHIFT+AV
	SHIFT+ -/--
SUBTITLE	SHIFT+
SKIP ←	SHIFT+LEFT
SKIP →	SHIFT+RIGHT
SKIP PREV.	SHIFT+ P-
SKIP NEXT	SHIFT+ P+
A-B	SHIFT+BACK
TIMER REC	SHIFT+SLEEP
TV SYSTEM	SHIFT+ TV/DTV
EJECT / GO TO	SHIFT+
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

