



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SAT	/ SOURCE
GOTO	
SUB	
VOL+	VOL+
VOL -	VOL -
PAGE+	P+
PAGE -	P -
UP / CH+	UP
DOWN / CH -	DOWN
LEFT / VOL -	LEFT
RIGHT / VOL+	RIGHT
OK	OK
RECALL	BACK
TIMESHIFT	SLEEP
TV / RADIO	TV/DTV
INFO	INFO
EPG	EPG
FAV	FAV
RED / GOTO	RED

ORIGINAL	SUPERIOR
GREEN / LIST	GREEN
YELLOW / TIMER	YELLOW
BLUE / TTX	BLUE
AUDIO	SHIFT+MUTE
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

