



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
WWW	/ SOURCE
	-/--
MUSIC	
PHOTO	
TEXT	
VOL+	VOL+
VOL -	VOL -
P/PG.+	P+
P/PG. -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RCL.	BACK
TV / RAD.	TV/DTV
i	INFO
EPG	EPG

ORIGINAL	SUPERIOR
FAV	FAV
SLOW	
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
	SHIFT+MUTE
	SHIFT+1
	SHIFT+2
	SHIFT+3
	SHIFT+
SUB CH.	SHIFT+DOWN
	SHIFT+OK
	SHIFT+BACK
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

