



ORIGINAL	SUPERIOR
	POWER
	MUTE
	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
VOL+	VOL+
VOL -	VOL -
P+	P+
P -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
+i	INFO
	FAV
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
STOP	SHIFT+
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW

[illegible]