



We are sorry,
PICTURE
NOT
AVAILABLE

ORIGINAL	REPLACEMENT
POWER	POWER
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
VOL+	VOL+
VOL-	VOL-
SKIP NEXT CHAP	P+
SKIP PREV CHAP	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
REPEAT	BACK
SURROUND	FAV
REW	GREEN
FWD	BLUE
PLAY	YELLOW
PAUSE	
STOP	
EJECT	
SLEEP	SLEEP
TV	TV/DTV
CD	SHIFT+1

[illegible]