



| ORIGINAL   | SUPERIOR  |
|------------|-----------|
|            | POWER     |
| MUTE       | MUTE      |
| MENU       | MENU      |
| CLEAR      | EXIT      |
| 1/2/3/4/5  | 1/2/3/4/5 |
| 6/7/8/9    | 6/7/8/9   |
| 0 / 10     | 0         |
| USB        | / AV      |
| 10+        | -/--      |
| V-MODE     |           |
| ZOOM       |           |
| SETUP      |           |
| SUBTITLE   |           |
| VOL+       | VOL+      |
| VOL-       | VOL-      |
| SKIP NEXT  | P+        |
| SKIP PREV. | P-        |
| UP         | UP        |
| DOWN       | DOWN      |
| LEFT       | LEFT      |
| RIGHT      | RIGHT     |
| ENTER      | OK        |
| RETURN     | BACK      |
| STEP       | SLEEP     |
| N / P      | TV/DTV    |

| ORIGINAL | SUPERIOR      |
|----------|---------------|
| TITLE    | INFO          |
| PROG.    | EPG           |
| GO TO    | FAV           |
| EJECT    |               |
| PAUSE    |               |
| STOP     |               |
| REW      | GREEN         |
| PLAY     | YELLOW        |
| FWD      | BLUE          |
| OSD      | SHIFT+        |
| ANGLE    | SHIFT+        |
| LANGUAGE | SHIFT+        |
| REPEAT   | SHIFT+BACK    |
| A-B      | SHIFT+SLEEP   |
| L / R    | SHIFT+ TV/DTV |
| PBC      | SHIFT+ EPG    |
| SLOW     | SHIFT+        |
|          |               |
|          |               |
|          |               |
|          |               |
|          |               |
|          |               |
|          |               |
|          |               |
|          |               |

