



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU /	MENU
PICTURE /	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	/ AV
+100 / FAV. CH.	-/--
STEREO /	
STILL /	
SOUND /	
TEXT /	
VOL+	VOL+
VOL-	VOL-
CH+	P+
CH-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
SEL.	OK
RECALL	BACK
SLEEP	SLEEP
TV	TV/DTV
ADD / DEL.	EPG

ORIGINAL	SUPERIOR
LANG.	FAV
AUTO	
RED / PIP	RED
GREEN / SWAP	GREEN
YELLOW / POSITION	YELLOW
BLUE / SIZE	BLUE
TV MENU /	SHIFT+MENU
AV 1	SHIFT+1
AV 2	SHIFT+2
AV 3 / S-VIDEO	SHIFT+3
COMPONENT 1	SHIFT+4
COMPONENT 2	SHIFT+5
ANALOG RGB	SHIFT+6
DIGITAL RGB	SHIFT+7
ZOOM /	SHIFT+
PRE. PAGE / TWIN PIC.	SHIFT+LEFT
NEXT PAGE / SCREEN	SHIFT+RIGHT
PREV. CH.	SHIFT+BACK

