



ORIGINAL	SUPERIOR	ORIGINAL	SUPERIOR
POWER	POWER	STOP	
MENU / i	MENU	RED	RED
CLEAR	EXIT	GREEN	GREEN
1/2/3/4/5	1/2/3/4/5	YELLOW	YELLOW
6/7/8/9/0	6/7/8/9/0	BLUE	BLUE
AV	 / AV		
CHILD LOCK	-/--		
SHOW VIEW			
VISS			
SPEED			
A – TR			
CH. / TRK.+	P+		
CH. / TRK-	P-		
UP	UP		
DOWN	DOWN		
LEFT	LEFT		
RIGHT	RIGHT		
OK / CLK/CNT	OK		
 / ZERO	BACK		
AD – SKIP	SLEEP		
TV / VCR	TV/DTV		
REC. END / SEARCH	INFO		
OTPB	EPG		
EJECT			
PAUSE / STILL			

