



ORIGINAL	SUPERIOR	ORIGINAL	SUPERIOR
POWER	POWER	REW	GREEN
MUTE	MUTE	PLAY	YELLOW
MENU	MENU	FWD	BLUE
C	EXIT		
1/2/3/4/5	1/2/3/4/5		
6/7/8/9/0	6/7/8/9/0		
PLAY MDOE	 / AV		
TIME	-/--		
DISPLAY			
SOUND			
SETUP			
SURROUND			
VOL+	VOL+		
VOL-	VOL-		
SKIP NEXT	P+		
SKIP PREV.	P-		
UP	UP		
DOWN	DOWN		
LEFT	LEFT		
RIGHT	RIGHT		
ENTER	OK		
 / RETURN	BACK		
TOP MENU / PBC	FAV		
PAUSE			
STOP			

