



ORIGINAL	SUPERIOR	ORIGINAL	SUPERIOR
	POWER		
	MUTE		
 / MENU	MENU		
	EXIT		
1/2/3/4/5	1/2/3/4/5		
6/7/8/9/0	6/7/8/9/0		
1/a	-/--		
 / HOME			
 / MOUSE			
 / VOL+	VOL+		
 / VOL -	VOL -		
CH+	P+		
CH -	P -		
UP	UP		
DOWN	DOWN		
LEFT	LEFT		
RIGHT	RIGHT		
OK	OK		
 / RETURN	BACK		
RED / MEDIA	RED		
GREEN / MUSIC	GREEN		
YELLOW / WEB	YELLOW		
BLUE / APP	BLUE		
SKIP NEXT	SHIFT+ P+		
SKIP PREV	SHIFT+ P -		

