



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
10+	-/--
OSD	
GOTO	
SETUP	
SUBTITLE	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
REPEAT	BACK
STEP	SLEEP
N / P	TV/DTV
TITLE	INFO
PROG	EPG

ORIGINAL	SUPERIOR
RESUME	FAV
OPEN / CLOSE	/ NET TV
PAUSE	
STOP	/ SMART
REW	GREEN
PLAY	YELLOW
FWD	BLUE
AUDIO	SHIFT+MUTE
b	SHIFT+1
#	SHIFT+2
#	SHIFT+3
EQ	SHIFT+
ZOOM	SHIFT+
SLOW	SHIFT+
ANGLE	SHIFT+
ECHO+	SHIFT+ VOL+
ECHO -	SHIFT+ VOL -
A - B	SHIFT+SLEEP
R / L	SHIFT+TV/DTV
PBC	SHIFT+INFO

