

ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT AV	 / SOURCE
DISPLAY	
EFFECTS	
AM / FM	
TEST	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RESTORE	BACK
SLEEP	SLEEP
INPUT VCR	TV/DTV
INFO	INFO
TRIM	EPG
PRESETS	FAV

ORIGINAL	SUPERIOR
SUBWOOFER	 / NET TV
PAUSE	
STOP	 / SMART
PRESET PREV	GREEN
PLAY	YELLOW
PRESET NEXT	BLUE
POWER OFF	SHIFT+POWER
AM	SHIFT+1
FM	SHIFT+2
CD	SHIFT+3
DVD	SHIFT+4
AUX	SHIFT+5
MULTI – CH	SHIFT+6
PHONO	SHIFT+7
SAT	SHIFT+8
INPUT TAPE	SHIFT+9
POWER ON	SHIFT+0
DTS NEO 6 MUSIC	SHIFT+ -/--
DOLBY PLII MOVIE	SHIFT+ 
DOLBY PLII MUSIC	SHIFT+ 
DOLBY PLII X MUSIC	SHIFT+ 
DTS NEO 6 CINEMA	SHIFT+ 
TUNE+	SHIFT+ VOL+
TUNE -	SHIFT+ VOL -
VOL REAR+	SHIFT+RIGHT

[illegible]