



We are sorry,
PICTURE
NOT
AVAILABLE

ORIGINAL	SUPERIOR
POWER	POWER
ON	SHIFT+POWER
OFF	SHIFT+0
MENU	MENU
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
CLEAR	EXIT
GREATER 10	-/--
DISPLAY	
CHECK	
SPACE	
TEXT	
INDEX PREV	LEFT
INDEX NEXT	RIGHT
SKIP NEXT TACK	P+
SKIP PREV TRACK	P-
PITCH RESET	OK
PITCH UP	UP
PITCH DOWN	DOWN
REPEAT	BACK
REPEAT A-B	SHIFT+BACK
TIME	SLEEP
SCAN	TV/DTV
DIMMER	INFO
PROGRAM	EPG

[illegible]