



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
MIC	/ SOURCE
+10	-/--
DISPLAY	
ZOOM	
SETUP	
SUBTITLE	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
REPEAT	BACK
DIGEST	TV/DTV
PROGRAM	INFO
CHANNEL	EPG

ORIGINAL	SUPERIOR
LANGUAGE	FAV
EJECT	/ NET TV
PAUSE	
STOP	/ SMART
REW	GREEN
PLAY	YELLOW
FWD	BLUE
TOP MENU	SHIFT+MENU
CANCEL	SHIFT+EXIT
PBC	SHIFT+1
N/P	SHIFT+2
GOTO	SHIFT+
KEY+	SHIFT+UP
KEY -	SHIFT+DOWN
SLOW	SHIFT+LEFT
REPEAT A – B	SHIFT+BACK
STEP	SHIFT+SLEEP
RANDOM	SHIFT+EPG
ANGLE	SHIFT+FAV

