



ORIGINAL	SUPERIOR
	POWER
	MUTE
MEDIA	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
#	-/--
T	
	VOL+
	VOL-
CH+	P+
CH-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
	TV/DTV
i	INFO
	EPG
	FAV
RED	RED
GREEN	GREEN

ORIGINAL	SUPERIOR
YELLOW	YELLOW
BLUE	BLUE
	SHIFT+MENU
	SHIFT+1
	SHIFT+2
	SHIFT+3
	SHIFT+4
SKIP PREV.	SHIFT+ P-
SKIP NEXT	SHIFT+ P+
ENTER	SHIFT+OK
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

