



ORIGINAL	SUPERIOR
ZONE 1	
STANDBY	POWER
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0-10	6/7/8/9/0
(CD)	/ SOURCE
(TUNER)	-/--
ENTER	OK
SKIP NEXT	P+
SKIP PREV	P -
REPEAT	BACK
RANDOM	TV/DTV
PROGRAM	EPG
STOP	/ SMART
REW	GREEN
PLAY/PAUSE	YELLOW
FWD	BLUE
ZONE 2	
STANDBY	SHIFT+POWER
STR/MONO	SHIFT+SLEEP
AM/FM	SHIFT+TV/DTV
INFO	SHIFT+INFO
MEMORY	SHIFT+EPG
AUTO	SHIFT+

ORIGINAL	SUPERIOR
TUNE -	SHIFT+GREEN
TUNE+	SHIFT+BLUE
ZONE 3	
MUTE	MUTE
VOL+	VOL+
VOL -	VOL -
STANDBY	SHIFT+EXIT
TV	SHIFT+1
TAPE	SHIFT+2
AUX	SHIFT+3
TUNER	SHIFT+4
CD	SHIFT+5
PHONO	SHIFT+6
BASS+	SHIFT+ VOL+
BASS -	SHIFT+ VOL -
TREB+	SHIFT+ P+
TREB -	SHIFT+ P -
L	SHIFT+LEFT
R	SHIFT+RIGHT
DEFAULT	SHIFT+BACK

