



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
CLEAR / EQ	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
PDVD	 / AV
+10	-/--
DISPLAY	
PBC	
ANGLE	
LANGUAGE	
VOLUME+	VOL+
VOLUME-	VOL-
SKIPNEXT	P+
SKIP PREV.	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
SLOW	SLEEP
A-B	TV/DTV
VIEW	EPG

ORIGINAL	SUPERIOR
PROG.	FAV
OPEN / CLOSE	
PAUSE	
STOP	
REW	GREEN
PLAY	YELLOW
FWD	BLUE
TIME	SHIFT+POWER
RESUME	SHIFT+EXIT
KEY b	SHIFT+1
KEY #	SHIFT+2
RAN	SHIFT+ 
ZOOM	SHIFT+ 
SETUP	SHIFT+ 
SUBTITLE	SHIFT+ 
L/P	SHIFT+LEFT
N/P	SHIFT+RIGHT
REPEAT	SHIFT+BACK
STEP	SHIFT+SLEEP
TITLE	SHIFT+INFO

