



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
DVD MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
+10	-/--
DISPLAY	
GOTO	
SETUP	
SUBTITLE	
TV VOL+	VOL+
TV VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
REPEAT	BACK
SLEEP	SLEEP
TV/DVD/AV	TV/DTV
DVD TITLE	INFO
PROGRAM	EPG

ORIGINAL	SUPERIOR
A - B	FAV
OPEN/CLOSE	/ NET TV
PAUSE	
STOP	/ SMART
REW	GREEN
PLAY	YELLOW
FWD	BLUE
AUDIO	SHIFT+MUTE
TV MENU	SHIFT+MENU
OSD	SHIFT+
ZOOM	SHIFT+
S.SYS	SHIFT+
PICT	SHIFT+
TV CH+	SHIFT+ P+
TV CH -	SHIFT+ P -
ANGLE	SHIFT+EPG
LOOP	SHIFT+FAV

