



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
/ EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
USB	/ SOURCE
SEARCH	-/--
CHECK	
RESOLUTION	
SUB – T.	
TEXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
CLEAR	BACK
TV/RADIO	TV/DTV
INFO	INFO
GUIDE	EPG

ORIGINAL	SUPERIOR
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE / i – KEY	BLUE
/ HOME	SHIFT+MENU
AUX	SHIFT+1
UHF	SHIFT+2
LANG.	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
ENTER	SHIFT+OK
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

