



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
YPbPr	 / SOURCE
>10	-/--
DISPLAY	
ZOOM	
SETUP	
SUBTITLE	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RETURN	BACK
A-TIME	SLEEP
P. / N.	TV/DTV
TITLE	INFO

ORIGINAL	SUPERIOR
PROGRAM	EPG
BOOKMARK	FAV
EJECT	 / NET TV
PAUSE	
STOP	 / SMART
REW	GREEN
PLAY	YELLOW
FWD	BLUE
AUDIO	SHIFT+MUTE
RESET	SHIFT+EXIT
3D	SHIFT+3
CHANNEL	SHIFT+ -/--
ANGLE	SHIFT+ 
REPEAT	SHIFT+BACK
STEP	SHIFT+SLEEP
REPEAT A – B	SHIFT+INFO
INTRO	SHIFT+EPG
DOLBY PL. II	SHIFT+FAV
SLOW	SHIFT+ 

