



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
MODE	/ AV
10+ / -/--	-/--
DISPLAY	
GOTO	
SETUP	
SUB-T	
VOL+	VOL+
VOL-	VOL-
SKIP NEXT	P+
SKIP PREV.	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RESUME	BACK
PBC	SLEEP
SHUFFLE	TV/DTV
TITLE	INFO

ORIGINAL	SUPERIOR
PBC	EPG
PROGRAM	FAV
PAUSE	
STOP	
REW	GREEN
PLAY	YELLOW
FWD	BLUE
AUDIO	SHIFT+MUTE
ZOOM	SHIFT+
ANGLE	SHIFT+
CH+	SHIFT+ P+
CH-	SHIFT+ P-
SLOW LEFT	SHIFT+LEFT
SLOW RIGHT	SHIFT+RIGHT
REPEAT	SHIFT+BACK
A-B	SHIFT+SLEEP

