



ORIGINAL	REPLACEMENT
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
LIST	-/--
VIDEO	
ZOOM	
SUBTITLE	
TEXT	
VOL+	VOL+
VOL-	VOL-
CH+	P+
CH-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
TV/RADIO	TV/DTV
INFO	INFO
GUIDE	EPG
RANDOM	FAV

ORIGINAL	REPLACEMENT
EJECT	
PAUSE	
STOP	
REC	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
AUDIO	SHIFT+MUTE
SETUP	SHIFT+MENU
INPUT DVD/DVB	SHIFT+1
INPUT USB	SHIFT+2
ANGLE	SHIFT+
TITLE	SHIFT+
STEP	SHIFT+RIGHT
REPEAT	SHIFT+BACK
REPEAT A-B	SHIFT+SLEEP

