



ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
MENU	MENU
EXIT / SLOW	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
USB	/ SOURCE
LIST / PBC	-/--
DISPLAY	
ZOOM	
Q. PLAY	
TTX	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
DVD / DVB	TV/DTV
INFO	INFO
EPG / P/N	EPG

ORIGINAL	SUPERIOR
FAV / A-B	FAV
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
SEARCH	SHIFT+EXIT
VIDEO	SHIFT+
SETUP	SHIFT+
SUBTITLE	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
PG. UP	SHIFT+UP
PG. DN	SHIFT+DOWN
REPEAT	SHIFT+BACK
TV / RADIO	SHIFT+TV/DTV
TITLE	SHIFT+INFO
RANDOM	SHIFT+FAV
EJECT	SHIFT+
PAUSE	SHIFT+
STOP	SHIFT+
ANGLE	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

