



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
SEARCH	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
10+	-/--
OSD	
ZOOM	
SETUP	
SUBTITLE	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
SELECT	OK
RETURN	BACK
STEP	SLEEP
L/R	TV/DTV
DIGEST	INFO
PROGRAM	EPG

ORIGINAL	SUPERIOR
RESUME	FAV
OPEN/CLOSE	/ NET TV
PAUSE	
STOP	/ SMART
REW	GREEN
PLAY	YELLOW
FWD	BLUE
AUDIO	SHIFT+MUTE
3D	SHIFT+3
A - B	SHIFT+
ANGLE	SHIFT+
REPEAT	SHIFT+BACK
SLOW	SHIFT+SLEEP

