

ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
USB	AV
NOT USED	-/--
GOTO	
ASPECT	
PIC	
TXT	
VOL+	VOL+
VOL-	VOL-
P+	P+
P-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
NOT USED	SLEEP
TV/RADIO	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
GUIDE	EPG
FAV	FAV
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
SWAP	SHIFT+2
RESOLUTION	SHIFT+ 
SUBTITLE	SHIFT+ 
PAUSE	SHIFT+ 
STOP	SHIFT+ 
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE
SKIP NEXT CHAP	SHIFT+P+
SKIP PREV CHAP	SHIFT+P-

