



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
/ MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	/ SOURCE
PVR LIST	-/--
/ P. MODE	
/ SUBTITLE	
TEXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
SLEEP	SLEEP
DTV / RADIO	TV/DTV
INFO	INFO
GUIDE	EPG

ORIGINAL	SUPERIOR
FAV. CH.	FAV
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO / I/II	SHIFT+MUTE
/ S. MODE	SHIFT+
/ P. SIZE	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY / PAUSE / TS	SHIFT+YELLOW
FWD	SHIFT+BLUE

