



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9	6/7/8/9
0 – 10	0
USB	/ SOURCE
10+	-/--
OSD	
ZOOM	
SLOW	
GO TO	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
TITLE	INFO
SETUP	EPG

ORIGINAL	SUPERIOR
LANGUAGE	FAV
EJECT	/ NET TV
PAUSE	
STOP	/ SMART
REW	GREEN
PLAY	YELLOW
FWD	BLUE
A – B	SHIFT+MUTE
PBC	SHIFT+MENU
ANGLE	SHIFT+
SUBT.	SHIFT+
REPEAT	SHIFT+BACK
STEP	SHIFT+SLEEP
PROG	SHIFT+RED
N / P	SHIFT+GREEN
V – MODE	SHIFT+YELLOW
R / L	SHIFT+BLUE

