



ORIGINAL	SUPERIOR
POWER/STANDBY	POWER
MUTE	MUTE
PBC MENU	MENU
CLEAR/MEDIA	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
DVD/DVB	/ SOURCE
10+	-/--
DISPLAY	
ZOOM	
SUB/MP3	
TEXT	
VOL+	VOL+
VOL -	VOL -
CH+ / SKIP NEXT	P+
CH - / SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
TV/R / A - B	TV/DTV
SCAN/SEARCH	INFO
EPG	EPG

ORIGINAL	SUPERIOR
DIGEST	FAV
SLOW	
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
SETUP	SHIFT+MENU
V-MODE	SHIFT+
ANGLE	SHIFT+
TITLE	SHIFT+
REPEAT	SHIFT+BACK
STEP	SHIFT+SLEEP
N/P	SHIFT+TV/DTV
EJECT	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

