



ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
GOTO	
MIX	
TELETEXT	
VOL+	VOL+
VOL-	VOL-
CH+	P+
CH-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RETURN	BACK
TV / RADIO	TV/DTV
INFO	INFO
EPG	EPG
FAV	FAV
HOLD	
RED / VIEW	RED

ORIGINAL	SUPERIOR
GREEN / HDMI	GREEN
YELLOW / TV TYPE	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
REVEAL	SHIFT+
SIZE	SHIFT+
SUBTITLE	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV.	SHIFT+ P-
PAG.+	SHIFT+UP
PAG.-	SHIFT+DOWN
INDEX	SHIFT+INFO
PROG.	SHIFT+FAV
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

