



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
DVD/DVB	/ SOURCE
10+	-/--
OSD	
ZOOM	
LANGUAGE	
SUBTITLE	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
DISC	INFO
PROG	EPG
L/R	FAV
EJECT	/ NET TV

ORIGINAL	SUPERIOR
PAUSE	
STOP	/ SMART
REW	GREEN
PLAY	YELLOW
FWD	BLUE
PBC	SHIFT+1
3D	SHIFT+3
CARD/USB	SHIFT+
GO TO	SHIFT+ -/--
SETUP	SHIFT+
SLOW	SHIFT+LEFT
REPEAT	SHIFT+BACK
STEP	SHIFT+SLEEP
TITLE	SHIFT+INFO
A-B	SHIFT+EPG
RESUME	SHIFT+YELLOW

