



ORIGINAL	SUPERIOR
STANDBY	POWER
MUTE	MUTE
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
V - MODE	/ SOURCE
10+	-/--
DISPLAY	
ZOOM	
SETUP	
SUBTITLE	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
STEP	SLEEP
P / N	TV/DTV
TITLE	INFO

ORIGINAL	SUPERIOR
PROG	EPG
MARK	FAV
EJECT	/ NET TV
STOP	/ SMART
F. REV	GREEN
PLAY / PAUSE	YELLOW
F. FWD	BLUE
LANGUAGE	SHIFT+MUTE
SEARCH	SHIFT+EXIT
SHUFFLE	SHIFT+ -/--
PBC	SHIFT+
ANGLE	SHIFT+
SLOW	SHIFT+
CHANNEL	SHIFT+
/ REPEAT	SHIFT+BACK
/ A - B	SHIFT+SLEEP
RESET	SHIFT+TV/DTV

