



| ORIGINAL  | SUPERIOR  |
|-----------|-----------|
| STANDBY   | POWER     |
| MUTE      | MUTE      |
| MENU      | MENU      |
| CLEAR     | EXIT      |
| 1/2/3/4/5 | 1/2/3/4/5 |
| 6/7/8/9/0 | 6/7/8/9/0 |
| V - MODE  | / SOURCE  |
| 10+       | -/--      |
| DISPLAY   |           |
| ZOOM      |           |
| SETUP     |           |
| SUBTITLE  |           |
| VOL+      | VOL+      |
| VOL -     | VOL -     |
| SKIP NEXT | P+        |
| SKIP PREV | P -       |
| UP        | UP        |
| DOWN      | DOWN      |
| LEFT      | LEFT      |
| RIGHT     | RIGHT     |
| ENTER     | OK        |
| RETURN    | BACK      |
| STEP      | SLEEP     |
| P / N     | TV/DTV    |
| TITLE     | INFO      |

| ORIGINAL     | SUPERIOR     |
|--------------|--------------|
| PROG         | EPG          |
| MARK         | FAV          |
| EJECT        | / NET TV     |
| STOP         | / SMART      |
| F. REV       | GREEN        |
| PLAY / PAUSE | YELLOW       |
| F. FWD       | BLUE         |
| LANGUAGE     | SHIFT+MUTE   |
| SEARCH       | SHIFT+EXIT   |
| SHUFFLE      | SHIFT+ -/--  |
| PBC          | SHIFT+       |
| ANGLE        | SHIFT+       |
| SLOW         | SHIFT+       |
| CHANNEL      | SHIFT+       |
| / REPEAT     | SHIFT+BACK   |
| / A - B      | SHIFT+SLEEP  |
| RESET        | SHIFT+TV/DTV |
|              |              |
|              |              |
|              |              |
|              |              |
|              |              |
|              |              |
|              |              |
|              |              |
|              |              |

