


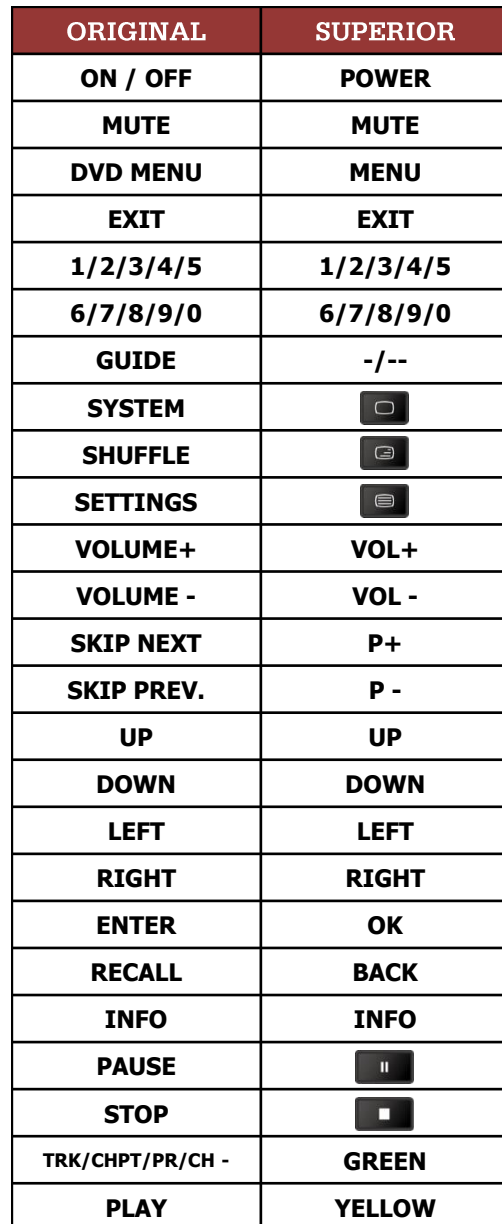

A black Superior 4 in 1 remote control. The top features a red Power button and a Mute button with a speaker icon. Below these are four function buttons: TV, SAT, DVD, and AUX, each with a small star icon above it. The next row contains MENU, EXIT, and SHIFT buttons. A numeric keypad (1-9, 0, and a slash/underscore key) follows. Below the numbers are TV/AV, PVR, SIZE, and SETUP buttons. The center features a directional pad with an OK button in the middle, flanked by +V, P+, -V, and P- buttons. Below the pad are BACK, SLEEP, TV/DTV, INFO, EPG, FAV, NET TV (with a red triangle icon), II (pause), and SMART buttons. The bottom row consists of a red dot button, a green left arrow, a yellow right arrow, and a blue double right arrow. The brand name 'SUPERIOR' and '4 in 1' are printed at the bottom.