



ORIGINAL	SUPERIOR
ON / OFF	POWER
MUTE	MUTE
DVD MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
CD – DVD	/ SOURCE
GREEN / CD #	-/--
/ LIBRARY	
YELLOW / PLAYLIST	
SETTINGS	
u MUSIC	
VOLUME+	VOL+
VOLUME -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP / TUNE UP	UP
DOWN / TUNE DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
REPEAT / →	BACK
RED / ENCORE	SLEEP
TV	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
GUIDE	EPG
FM – AM	FAV
PAUSE	/ SMART TUBE
STOP	/ SMART VIDEO
WHOLE CD / BLUE	RED
SEEK PREV	GREEN
PLAY	YELLOW
SEEK NEXT	BLUE
AUX	SHIFT+1
CBL – SAT	SHIFT+2
STORED	SHIFT+3
RATING+	SHIFT+ VOL+
RATING -	SHIFT+ VOL -
CH / TRACK / CHAPT+	SHIFT+ P+
CH / TRACK / CHAPT -	SHIFT+ P -
SYSTEM	SHIFT+EPG
SHUFFLE / ←	SHIFT+FAV

