



ORIGINAL	SUPERIOR
POWER	POWER
AUDIO	MUTE
MUTE	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AUX	 / SOURCE
RESUME	-/--
OSD	
SURR	
SCAN	
SUBT	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RETURN	BACK
MODE	TV/DTV
DIM	INFO
PROGR	EPG

ORIGINAL	SUPERIOR
DISC	FAV
STOP	 / SMART
REW	GREEN
PLAY / PAUSE	YELLOW
FWD	BLUE
TUNER	SHIFT+1
PHONO	SHIFT+2
TAPE	SHIFT+3
STATION+	SHIFT+ P+
STATION -	SHIFT+ P -
REPEAT	SHIFT+BACK
REPEAT AB	SHIFT+SLEEP

