



ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
/ MENU	MENU
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AV	/ SOURCE
STB	-/--
/ LANG.	
/ OPTIONS	
/ SUB.	
VOL+	VOL+
VOL -	VOL -
PROG.+	P+
PROG. -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
/ BACK	BACK
TV	TV/DTV
i / INFO	INFO
/ GUIDE	EPG
FAV	FAV

ORIGINAL	SUPERIOR
/ INTERACTIVE	/ SMART
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
VOD	SHIFT+1
LAST / P ↔ P	SHIFT+ -/--
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
? / HELP	SHIFT+INFO
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

