



ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
CH.	-/--
GO TO	
SUB.	
TXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
REPEAT	BACK
TV/RADIO	TV/DTV
INFO	INFO
EPG	EPG
FAV	FAV
RED	RED

ORIGINAL	SUPERIOR
GREEN / V-FORMAT	GREEN
YELLOW / ASPECT	YELLOW
BLUE / TIMER	BLUE
AUDIO	SHIFT+MUTE
PVR	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
PAGE+	SHIFT+UP
PAGE -	SHIFT+DOWN
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REV.	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

