



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
ASPECT	
TEXT	
V+	VOL+
V -	VOL -
P+	P+
P -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RETURN	BACK
TIMER	SLEEP
TV/RADIO	TV/DTV
INFO	INFO
GUIDE	EPG
FAV	FAV
FREEZEW	 / SMART
RED	RED

[illegible]