



ORIGINAL	SUPERIOR	ORIGINAL	SUPERIOR
	POWER		
	MUTE		
MENU	MENU		
1/2/3/4/5	1/2/3/4/5		
6/7/8/9/0	6/7/8/9/0		
	-/--		
VOL+	VOL+		
VOL -	VOL -		
P+	P+		
P -	P -		
UP	UP		
DOWN	DOWN		
LEFT	LEFT		
RIGHT	RIGHT		
OK	OK		
BACK	BACK		
INFO	INFO		
FAV	FAV		
SKIP NEXT	SHIFT+ P+		
SKIP PREV.	SHIFT+ P -		
REC	SHIFT+RED		
PLAY / PAUSE	SHIFT+YELLOW		

