



ORIGINAL	SUPERIOR
POWER	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
USB / LIST	/ SOURCE
/ GO TO	-/--
HDMI / RES.	
RATIO	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
/ TIMER	SLEEP
TV / RAD.	TV/DTV
INFO	INFO
EPG	EPG
FAV	FAV

ORIGINAL	SUPERIOR
RED / SUB.	RED
GREEN / LANG.	GREEN
YELLOW / MEDIA PL.	YELLOW
BLUE / TXT	BLUE
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
PAGE - ↑	SHIFT+UP
PAGE - ↓	SHIFT+DOWN
SOS	SHIFT+INFO
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

