



| ORIGINAL    | SUPERIOR      |
|-------------|---------------|
| POWER       | POWER         |
|             | MUTE          |
| MENU        | MENU          |
| EXIT        | EXIT          |
| 1/2/3/4/5   | 1/2/3/4/5     |
| 6/7/8/9/0   | 6/7/8/9/0     |
| USB / LIST  | .... / SOURCE |
| → / GO TO   | -/--          |
| HDMI / RES. |               |
| RATIO       |               |
| VOL+        | VOL+          |
| VOL -       | VOL -         |
| CH+         | P+            |
| CH -        | P -           |
| UP          | UP            |
| DOWN        | DOWN          |
| LEFT        | LEFT          |
| RIGHT       | RIGHT         |
| OK          | OK            |
| BACK        | BACK          |
| / TIMER     | SLEEP         |
| TV / RAD.   | TV/DTV        |
| INFO        | INFO          |
| EPG         | EPG           |
| FAV         | FAV           |

| ORIGINAL           | SUPERIOR     |
|--------------------|--------------|
| RED / SUB.         | RED          |
| GREEN / LANG.      | GREEN        |
| YELLOW / MEDIA PL. | YELLOW       |
| BLUE / TXT         | BLUE         |
| SKIP NEXT          | SHIFT+ P+    |
| SKIP PREV          | SHIFT+ P -   |
| PAGE - ↑           | SHIFT+UP     |
| PAGE - ↓           | SHIFT+DOWN   |
| SOS                | SHIFT+INFO   |
| PAUSE              | SHIFT+       |
| STOP               | SHIFT+       |
| REC                | SHIFT+RED    |
| REW                | SHIFT+GREEN  |
| PLAY               | SHIFT+YELLOW |
| FWD                | SHIFT+BLUE   |
|                    |              |
|                    |              |
|                    |              |
|                    |              |
|                    |              |
|                    |              |
|                    |              |
|                    |              |
|                    |              |
|                    |              |

