



ORIGINAL	SUPERIOR
	POWER
	MUTE
/ MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
HDMI	/ SOURCE
/ REC LIST	-/--
/ FILM	
/ GOTO	
RATIO	
/ PHOTO	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
/ BACK	BACK
/ SLEEP	SLEEP
TV / RADIO	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
GUIDE / EPG	EPG
FAV	FAV
RED / SUBT	RED
GREEN / LANG	GREEN
YELLOW	YELLOW
BLUE / TXT	BLUE
/ MUSIC	SHIFT+MUTE
USB	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
PAGE UP	SHIFT+UP
PAGE DOWN	SHIFT+DOWN
SOS	SHIFT+INFO
/ JUMP	SHIFT+EPG
/ MARK	SHIFT+FAV
EJECT	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

