



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
HDMI	/ AV
REC. LIST	-/--
RATIO	
SUB.	
TEXT	
VOL+	VOL+
VOL-	VOL-
CH+	P+
CH-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
/ BACK	BACK
SLEEP	SLEEP
TV / RAD.	TV/DTV
INFO	INFO
EPG	EPG

ORIGINAL	SUPERIOR
FAV	FAV
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
---	SHIFT+ -/--
SKIP PREV.	SHIFT+ P-
SKIP NEXT	SHIFT+ P+
PAGE -	SHIFT+DOWN
PAGE -	SHIFT+UP
/ TIMER	SHIFT+SLEEP
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

