



We are sorry,
PICTURE
NOT
AVAILABLE

ORIGINAL	SUPERIOR
POWER	POWER
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
GUIDE	-/--
TELETEXT	
P+	P+
P-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
TV	TV/DTV
INFO	INFO
RED	RED
REEN	REEN
YELLOW	YELLOW
BLUE	BLUE
SKIP NEXT	SHIFT+ P+
SKIP PREV.	SHIFT+ P-
RADIO	SHIFT+TV/DTV
STOP	SHIFT+ 
REC	SHIFT+RED

[illegible]