



ORIGINAL	SUPERIOR
	POWER
AUDIO	MUTE
MENU	MENU
ADD / CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT	/ SOURCE
SLOW	-/--
DISPLAY	
GOTO	
SETUP	
SUBTITLE	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
REPEAT	BACK
TIMER	SLEEP
DISC. OP	TV/DTV
TITLE	INFO

ORIGINAL	SUPERIOR
EDIT	EPG
P. SCAN	FAV
OPEN / CLOSE	
PAUSE	
STOP / RETURN	
REC	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
DVD	SHIFT+1
VCR	SHIFT+2
USB	SHIFT+3
ZOOM	SHIFT+
ANGLE	SHIFT+
CH+	SHIFT+ P+
CH -	SHIFT+ P -

