



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT / RETURN	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
DVD / DVB	/ SOURCE
10+	-/--
V – MODE	
GOTO	
ANGLE	
TITLE / TEXT	
VOL+	VOL+
VOL -	VOL -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
	BACK
TIMESHIFT	SLEEP
TV/RADIO / VIEW	TV/DTV
DISPLAY / INFO	INFO
EPG / PBC	EPG
FAV / STEP	FAV

ORIGINAL	SUPERIOR
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
HDMI	SHIFT+
ZOOM	SHIFT+
SLOW	SHIFT+
SUBTITLE	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
REPEAT	SHIFT+BACK
FILELIST	SHIFT+EPG
EJECT	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW / PAGE -	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD / PAGE+	SHIFT+BLUE

