



ORIGINAL	SUPERIOR
	POWER
AUDIO	MUTE
DVD / MENU	MENU
CANCEL	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9	6/7/8/9
0 / AV	0
DVD	/ SOURCE
VCR	-/--
ANGLE	
ZOOM	
PLAY MODE	
SUB TITLE	
SKIP NEXT / INDEX+	P+
SKIP PREV / INDEX -	P -
UP	UP
DOWN	DOWN
LEFT / TRK. -	LEFT
RIGHT / TRK.+	RIGHT
ENTER / SELECT	OK
RETURN	BACK
	SLEEP
TV / VCR	TV/DTV
INFO	INFO
PROGRAM	EPG

ORIGINAL	SUPERIOR
MARKER / TAPE SPEED	FAV
	/ NET TV
/ PAUSE	
STOP	/ SMART
REC / OTR	RED
SEARCH – REW	GREEN
PLAY	YELLOW
SEARCH – FWD	BLUE
TIMER REC	SHIFT+POWER
SETUP / MENU	SHIFT+MENU
00:00:00	SHIFT+0
P+	SHIFT+ P+
P -	SHIFT+ P -
REPEAT A – B	SHIFT+BACK
CLOCK / COUNTER	SHIFT+SLEEP
TITLE	SHIFT+INFO
JUMP / ↩ ZERO	SHIFT+EPG
	SHIFT+

