



ORIGINAL	SUPERIOR
	POWER
	MUTE
DVD MENU	MENU
CANCEL	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0-AV	6/7/8/9/0
ANGLE / 00:00:00	-/--
ZOOM	
SETUP MENU	
SUBTITLE / ZERO	
VOL+	VOL+
VOL-	VOL-
P+	P+
P-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
SLOW	SLEEP
TV / VCR	TV/DTV
INFO	INFO
OPEN / CLOSE	
PAUSE	

[illegible]