



| ORIGINAL        | SUPERIOR  |
|-----------------|-----------|
|                 | POWER     |
| AUDIO           | MUTE      |
| MENU            | MENU      |
| CANCEL          | EXIT      |
| 1/2/3/4/5       | 1/2/3/4/5 |
| 6/7/8/9/0-AV    | 6/7/8/9/0 |
| DUBBING         | / SOURCE  |
| 30+             | -/--      |
| THUMBNAIL SET   |           |
| TIME SHIFT      |           |
| CLOCK/TIMER     |           |
| COUNTER RESET   |           |
| INDEX/SKIP NEXT | P+        |
| INDEX/SKIP PREV | P -       |
| UP              | UP        |
| DOWN            | DOWN      |
| LEFT/TRK -      | LEFT      |
| RIGHT/TRK+      | RIGHT     |
| ENTER/SELECT    | OK        |
| ZERO RETURN     | BACK      |
| SLOW            | SLEEP     |
| TV/VCR          | TV/DTV    |
| LIST            | INFO      |
| PROG            | EPG       |
| CALL            | FAV       |

| ORIGINAL     | SUPERIOR    |
|--------------|-------------|
| EJECT        | / NET TV    |
| PAUSE/STILL  |             |
| PLAY STOP    | / SMART     |
| REC/OTR      | RED         |
| REW          | GREEN       |
| PLAY         | YELLOW      |
| FWD          | BLUE        |
| VCR          | SHIFT+1     |
| HDD          | SHIFT+2     |
| CHANNEL+     | SHIFT+ P+   |
| CHANNEL -    | SHIFT+ P -  |
| REPEAT       | SHIFT+BACK  |
| REPEAT A – B | SHIFT+SLEEP |
| IT           | SHIFT+INFO  |
| TIMER REC    | SHIFT+EPG   |
| REC STOP     | SHIFT+      |
| REC MODE     | SHIFT+RED   |
|              |             |
|              |             |
|              |             |
|              |             |
|              |             |
|              |             |
|              |             |
|              |             |
|              |             |

