



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT NEXT	 / SOURCE
GO TO	-/--
DV	
DELETE	
COPY	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
TIMESHIFT	SLEEP
TV SYS.	TV/DTV
INFO	INFO
GUIDE	EPG
INSTANT REPLAY	YELLOW

ORIGINAL	SUPERIOR
AUDIO	SHIFT+MUTE
ZOOM	SHIFT+ 
ANGLE	SHIFT+ 
SUBTITLE	SHIFT+ 
SLOW	SHIFT+LEFT
CM SKIP	SHIFT+RIGHT
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
REPEAT	SHIFT+BACK
REPEAT A – B	SHIFT+SLEEP
LIVE TV	SHIFT+ TV/DTV
PAUSE	SHIFT+ 
STOP	SHIFT+ 
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

